

Z-NET Installation Guide



Congratulations on your purchase of our Z-NET IP-enabled Z-Wave interface. Z-NET incorporates the latest “Z-Wave Plus” technology, supports Network Wide Inclusion (NWI) and it may be installed anywhere a network connection is available using Ethernet or WiFi, Z-NET Please follow the steps below to install and configure your unit.

If you are upgrading from another interface (Z-Troller, Z-Stick, etc) to Z-NET, complete all steps.

If you are building a Z-Wave network from scratch, skip **STEP #2** and **STEP #5**.

****Steps 2 and 5 DO NOT work on AU, EU, or UK Z-NETs****

Installation Considerations: Although Z-Wave is a “mesh network” technology that routes commands from one device to another, optimal performance is best achieved by installing Z-NET with a wired Ethernet connection near the center of the home. Wired connections in other locations of the home may still yield excellent results but will usually introduce more signal routing. If a wired connection is not possible, consider using the built-in WiFi adapter. WiFi performance will vary depending on the quality of your router and the wireless “profile” of your home. If you experience WiFi problems with mobile device in your home, for example, you may encounter problems with Z-NET on WiFi.

Network Wide Inclusion (NWI) is a technology that allows Z-NET to add or delete devices to/from your Z-Wave network at long ranges. This greatly simplifies the process of setting up most networks. **However, NWI will only work with the newest Z-Wave devices**, those with v4.5x or 6.5x Z-Wave firmware (ZDK) installed. Adding/deleting older devices will require Z-NET and the device to be positioned within a few feet of each other. In these cases, the built-in WiFi adapter allows Z-NET to be easily repositioned. Any device marked with a Z-Wave+ logo supports NWI. Most devices available today are based on at least the 4.5x ZDK and will support NWI even though they are not marked with a Z-Wave + logo.

STEP #1 – Update HS3 Z-Wave Plug-in

1. Z-NET requires HS3 Z-Wave plug-in v3.0.0.196 (or higher). Download and install the new plug-in from your HS3 updater. Check the “Beta” section of the updater (at the bottom of the list) to find the latest Z-Wave plug-in.


STEP #2 – Backup Current Z-Wave Network (Only if upgrading from another Z-Wave interface)

1. Open your HS3 web interface, navigate to [Plug-ins>Z-Wave>Controller Management](#), expand the listing for your interface, then select “Back Up this interface” from the Actions menu.
2. Rename the backup file (if desired) and click the START button (as shown below). The operation should only take a few seconds and the word “Done” will appear when complete. Note the name of this file for later.

A screenshot of a web interface for backing up a Z-Wave network. It shows a dropdown menu with "Back Up this interface" selected. Below it is a text input field containing "ZNet_Office Z-Wave_003D46CA_2015-0" and a prompt to "Enter a filename to save the network information into, or use the default name provided." There is a "START" button and a green area at the bottom that says "Operational messages will appear here..."

Actions:
Back Up this interface
ZNet_Office Z-Wave_003D46CA_2015-0 Enter a filename to save the network information into, or use the default name provided.
START
Operational messages will appear here...

3. Navigate to [Plug-ins>Z-Wave>Controller Management](#), and disable the interface by clicking the green checkmark to the right of the interface name. A yellow and red crossed out circle will appear, once the interface is disabled (as shown here).
4. Delete the interface from the software by clicking the delete button underneath the interface name. **You must do this to avoid “Home ID” conflicts with Z-NET. DO NOT SKIP THIS STEP and DO NOT ERASE YOUR EXISTING INTERFACE!**
5. **Physically disconnect your existing interface from your system.**
 - a. **Z-Troller:** Disconnect the AC power supply and serial cable. REMOVE batteries.
 - b. **Z-Stick:** Unplug the stick from its USB port. If the blue status light is blinking, then press its control button once.

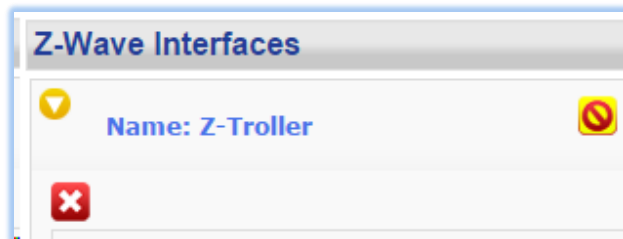


System Name	System	Maintenance	Last Seen
hometroller	192.168.0.75:9998	N/A	2/12/2015 10:12:25 AM
Z-NET-MARK	192.168.0.10	N/A	2/12/2015 10:34:29 AM
Z-NET-MARK	192.168.0.154	N/A	2/12/2015 10:34:29 AM

6. Store your existing interface in a safe place. This may be used as a backup should your Z-NET ever fail.

STEP #3 – Network Configuration

1. **Physical Installation:** Attach Z-NET to your local network (LAN) with the supplied Ethernet cable and power the unit with the included power adapter. The LED indicator will blink red for about 20 seconds, then glow solid red.
2. **Accessing Z-NET:** Using a PC, tablet or phone, open a browser and enter find.homeseer.com in the URL line. Then click the “search” button. In most cases, you’ll see two entries; one for your HomeTroller (or HS3 software system) and one for your Z-NET. There will be a third option if you are using the built-in WiFi adapter, then you’ll see a third entry (as shown below). Click the IP address hyperlink in the System column to access your Z-NET settings.
3. **Updating Z-NET:** If a Z-NET update is available, click the “Update” button in the upper right hand corner (as shown below). The update should only take a moment to install. You can also rename the unit, if you like. If you’re using more than 1 Z-NET, consider including the unit location in the name (**First Floor Z-NET**, for example). Be sure to submit your changes when done.
4. **IMPORTANT:** As shipped, Z-NET will accept a router-assigned IP address using “DHCP”. For most users, this is all that is required, as your HomeTroller or HS3 software system will now automatically discover Z-NET. You may now skip to **STEP #4**. However, if you wish to assign a persistent IP address to your Z-NET [or if your Z-NET is on a different network than you HS3 system](#), complete the rest of the steps in this section.

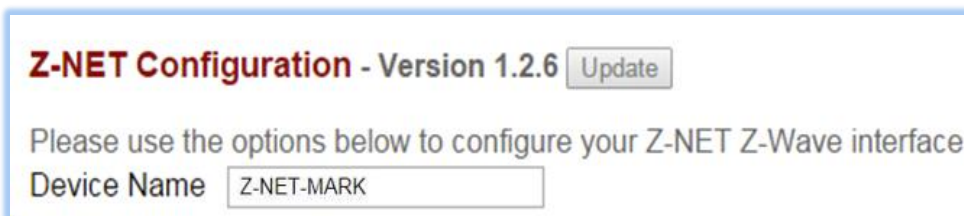

5. **OPTIONAL: Setting a Persistent (static) IP Address:** As shipped, Z-NET will accept a router-assigned IP address using “DHCP”. However, you may also assign a persistent IP address to Z-NET if desired. Use **either** of the following methods to accomplish this for your wired and/or wireless connections.

- a. **Use Z-NET settings:** Click the radio button for “Static-IP” and enter the static IP address of your choice. You should pick an address that is within your router’s subnet but outside of the DHCP range. This will avoid conflicts with DHCP devices on the network. Save your settings and Z-NET will reboot.
- b. **Use Router Address Reservation:** Many routers include an IP address reservation feature that allows the router to assign specific IP addresses based on the MAC address of a device. To use this feature, leave the Z-NET network settings on DHCP use enter the “MAC Address” and the IP address (as shown at right) into the router address reservation settings. Reboot your router. From this point on, your router will always assign the same IP address to Z-NET.

The screenshot shows a router configuration interface with two sections: 'Wired' and 'Wireless'.
Wired Section:
 Network: DHCP Static-IP
 IP Address: 192.168.0.154
 Gateway: 192.168.0.1
 Subnet Mask: 255.255.255.0
 MAC Address: b8:27:eb:b9:26:74
Wireless Section:
 SSID: MYHOME
 Password: [masked]
 Show password
 Security: WPA2-PSK
 Encryption: AES
 Network: DHCP Static-IP
 IP Address: 192.168.0.10
 Gateway: 192.168.0.1
 Subnet Mask: 255.255.255.0
 MAC Address: 80:1f:02:df:0d:da

STEP #4 – HS3 / Z-NET Configuration

1. Using a PC, tablet or phone, open a browser and enter find.homeseer.com in the URL line. Then click the “search” button. When the results appear, click the IP address hyperlink in the System column to access your HomeTroller or HS3 software system.
2. Navigate to [Plug-ins>Z-Wave>Controller Management](#), and click the “Add Interface” button.
 - a. **If you’re Z-NET has a DHCP-assigned IP address**, enter a name for your Z-NET and select “Z-NET Ethernet” from the Interface Model menu. Then choose your interface from the drop down list. If you’re using the WiFi adapter, you’ll see 2 entries (as shown below). Likewise, if you have multiple Z-NETs installed, you’ll see an

The screenshot shows the 'Add a Z-Wave Interface' dialog box. The title is 'Add a Z-Wave Interface'. Below the title, there is a dropdown menu for 'Name' set to 'New Interface'. The main form has three fields: 'Name' (text input with 'Living Room Z-NET'), 'Interface Model' (dropdown menu with 'Z-NET Ethernet'), and 'Choose Interface' (dropdown menu with options 'Z-NET-MARK', 'Z-NET-MARK', and 'Z-NET-MARK-wifi'). There are 'Add' and 'Cancel' buttons at the bottom left.

entry for each.

- b. **If you’re Z-NET has a persistent (static) IP address**, enter a name for your Z-NET and select “Ethernet Interface” from the Interface Model menu. Then enter the IP address of your Z-NET and port 2001 (as shown below). If you’re connecting to a Z-NET over the internet, use the WAN IP address of that location and be sure to forward port 2001 to your Z-NET in the router at that location.

The screenshot shows the 'Add a Z-Wave Interface' dialog box. The title is 'Add a Z-Wave Interface'. Below the title, there is a dropdown menu for 'Name' set to 'New Interface'. The main form has four fields: 'Name' (text input with '3rd Floor Z-NET'), 'Interface Model' (dropdown menu with 'Ethernet Interface'), 'IP Address' (text input with '192.168.0.154'), and 'Port Number' (text input with '2001'). There are 'Add' and 'Cancel' buttons at the bottom left.

3. Finally, click the yellow and red “disabled” button to enable your new Z-NET. A green “enabled” button should now



appear (as shown below)

4. The LED indicator on Z-NET is designed to glow **GREEN** when HS3 connects successfully to it. Visually inspect the unit to ensure your Z-NET is connected.
5. If you’re building a Z-Wave network from scratch, refer to your HomeTroller or HS3 documentation for information on setting up your Z-Wave network and **skip STEP #5**.
If you’re upgrading from another interface, **proceed to STEP #5**.

STEP #5 – Restore Z-Wave Network to Z-NET (Only if upgrading from another Z-Wave interface)

1. Open your HS3 web interface, navigate to [Plug-ins>Z-Wave>Controller Management](#), expand the listing for your new Z-NET, then select “Restore a Network to this Interface” from the Actions menu.
2. Choose the file you created back in **STEP #2**, confirm and start the restore. Your existing Z-Wave network information will be written to your Z-NET. Click the “Close” button when this operation is done.
3. At this point, Z-NET should be able to control only devices that are within direct range, since the routing table was not included in the backup/restore function. To confirm this, open the Actions menu again and select [Test Node Connectivity on a Network](#), then click Start. You should see a mixture of “successfully contacted” and “**did not respond**” messages, unless all nodes are within direct range of your Z-NET.
4. **Rebuilding the Routing Table:** Open the Actions menu and select [Optimize a Network, No Return Route Changes](#) and then click start. This will begin the process of rebuilding your routing table, one node at a time. This may take some time to complete, depending on the size of your network. We recommend running this function at least twice to build a reliable network.
5. **Adding Return Routes:** Open the Actions menu and select [Fully Optimize a Network](#). This will finalize the process of building your routing table by adding return routes from your devices back to Z-NET.

Remote Network Installation

It is possible for HomeSeer systems to communicate with Z-NET units installed on different networks. To accomplish this, follow these steps.

1. Follow the procedure in **STEP #3** above to configure Z-NET on the remote network.
2. Set a port forwarding rule in the remote router to forward port 2001 to the remote Z-NET.
3. If the remote network is set up as a static WAN IP address skip to the next set. Otherwise, subscribe to a dynamic DNS service to create a WAN domain name for the remote network.
4. Follow the procedure in **STEP #4** above to configure your HS3 system to communicate with the remote Z-NET.
However, make these changes:
 - a. Change the [Interface Model](#) to [Ethernet Interface](#)
 - b. Enter the [WAN IP Address](#) or [DDNS domain name](#) of the remote network in the [IP Address](#) field.
 - c. Enter 2001 into the [Port Number](#) field and enable the interface.

Note: Remote Z-Wave network setup will need to be accomplished FROM THE REMOTE LOCATION using your HomeSeer system controller management functions. Be sure to enable remote access of your HomeSeer system to make this possible

Reset Network Settings

1. Connect a keyboard to the unit and reboot your Zee S2.
2. When the light turns yellow press ‘r’ (lower case) and then press Enter.
3. If the light turns blue, your settings were successfully reset.

Troubleshooting Z-NET

All customers receive unlimited helpdesk support (helpdesk.homeseer.com) with **Priority Phone Support** (603-471-2816) for the first 30 days. FREE community based **Message Board** (board.homeseer.com) support is available 24/7.

Symptom	Cause	Solution
LED indicator won't light	AC power adapter not Installed or plugged in.	Make sure AC power adapter is installed and plugged in.
	AC Power Adapter Failed	Contact HomeSeer support
LED indicator glows solidly red but won't change to green	Z-NET cannot communicate with HomeTroller or HS3 software system	Ensure that Z-Wave plug-in v3.0.0.196 or later is installed
		Ensure that Z-NET is enabled and that IP address settings and port number 2001 are properly entered on HS3 controller mgmt. page
		Contact HomeSeer support
All Other Problems		Contact HomeSeer support

This product employs or practices certain features and/or methods of the following U.S. Patents: U.S. Patent Nos.6,891,838, 6,914,893 and 7,103,511.

HomeSeer Technologies
10 Commerce Park North, Unit #10
Bedford, NH 03110
www.homeseer.com
603-471-2816